

## Asterisk's Basic Phone Feature List

Call Forwarding System Access - Dial \*72 to access your call forwarding system and follow the voice prompts.



Call Forwarding Deactivation - Dial \*73 to deactivate Call Forwarding.



Call Forwarding on Busy Activation - Dial \*90 to forward your calls if the phone is busy.



Call Forwarding on Busy Deactivation - Dial \*91 to deactivate Call Forwarding if the phone is busy.



Call Waiting Activation - Dial \*70 to activate Call Waiting. This feature is deactivated by default.



Call Waiting Deactivation - Dial \*71 to deactivate Call Waiting.



Directory Access - Dial \*411 to access a directory that lists others on the PBX. Using someone's last name, you can find their number.



Do-Not-Disturb Activation - Dial \*78 to activate Do-Not-Disturb



Do-Not-Disturb Deactivation - Dial \*79 to deactivate Do-Not-Disturb



Extension Request using the Festival Voice Simulator - Dial \*65 to hear your extension using the Festival Voice Simulator.



Message Center (won't ask for an extension) - Dial \*97 to access your message center



Message Center (will ask for an extension) - Dial \*98 to access your message center



Time Request - Dial \*60 to hear the exact time as per Internet Time Servers.



Weather Request - Dial \*61 for the weather in your area.



Wakeup Call Scheduling - Dial \*62 to schedule a wakeup call.

